



## HD REPLACEMENT LEVERS INSTALL

### **Tools & Supplies Needed:**

Snap Ring Remover

Phillips Screwdriver

Flat Blade Screwdriver

½ " Open Box Wrench

### **Install:**

#### **Brake Lever**

1. Remove snap ring and pivot pin from stock lever.
2. Remove lever from housing and remove the nylon bushing from the stock lever.
3. Re-use the nylon bushing by installing it into the pivot pin hole on the Aeromach lever. \*Note: if the nylon bushing is worn or missing, you will need to replace it with a new one from a HD dealer.
4. Place lever back into control housing and replace pivot pin and snap ring.

#### **Clutch Lever**

1. Loosen the clutch tension nuts located at the lower end of the clutch cable so that the stock clutch lever can be removed.
2. Remove snap ring and pivot pin holding the clutch lever in place.
3. Pull clutch lever from housing.
4. To remove cable from stock lever, push the plastic pin out and replace into Aeromach lever.
5. Re-use nylon bushing and tension spring from stock lever.
6. Place the Aeromach clutch lever with cable attached, back into the hand control and secure with pivot pin and snap ring.
7. Tighten the tension on the clutch cable and adjust as needed.

*\*Note, always test clutch and brake operation before riding.*



617 A East Main St. • Cherryville, NC • 28021  
704-435-4386

NOTE: Motorcycles modified with some aftermarket parts, accessories and performance parts may be restricted from use on public roads and/or limited to closed courses. Please see U.S. EPA and your state regulations. Customers must exercise good judgment in the use, control, alteration, part selection and installation and maintenance of motorcycles. It is the sole and exclusive responsibility of the user to determine the suitability of the product for use and the user shall assume all legal, personal injury risk, and liability and all other obligations, duties and risks associated therewith.